

# ASKO

Dishwasher Instructions

# Quick guide

## 1 Load the baskets

Do not rinse dishes under running water before loading them in the dishwasher. Simply scrape off large food particles before loading the dishwasher.

## 2 Add detergent

The detergent compartment has one smaller compartment for the prewash and one for the main wash.

## 3 Check that the spray arms can rotate freely

## 4 Press the main power switch until the display lights up

## 5 Select a program and any options

## 6 Press Start/Stop and close the door